


Side view of centre hanger to Chassis

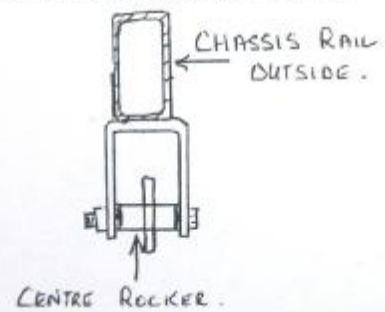

- 1) Weld centre hanger first, in desired position on chassis
- 2) Set up rocker & bolt (5/8" Greasable) up firm
- 3) Assemble Shackle Plates on rocker (9/16" Bolts)
- 4) Fit springs to shackle plates & front & rear hangers
- 5) Carefully set shackle plates as per bolt centres on drawing ie. 25mm or 1"
- 6) The position of the front and rear hangers is now where you weld them.